

### Contents

Each cartridge box contains two parts. (fig.1)

1. Cartridge Shell
2. Ink Tank

These two parts are combined inside your printer

### Installation

1. Remove the cartridge shell from its bag
2. Insert the cartridge shell into the printer (fig.2)
3. Remove the Ink Tank from the packaging
4. Remove the Yellow Tab from the Ink Tank (fig.3)
5. Insert the Ink Tank into the cartridge shell inside the printer (fig.4)
6. Close the carriage lid and press the ink button to charge the printer

The printer will take a few seconds to charge the printer, but once it is complete the printer will be ready to work

### Replacement

1. Press the ink cartridge change button
2. Open the carriage lid
3. Remove the empty ink tank
4. Remove the Cartridge Shell
5. Follow the installation instructions for replacement cartridge

### Attention

- a) After installation, if you get an error message saying the cartridge can not be recognised then try reinstalling the cartridge shell.
- b) Please ensure that you remove the yellow tab from the ink tank.
- c) The cartridge shell is not re-usable, you must replace it at the same time as the ink tank
- d) To ensure the best printing results, please run a nozzle check after installation. If the nozzle check is not satisfactory then run the head cleaning utility and try the nozzle check again.
- e) Do not touch the chip on the Cartridge Shell with your hands. Any dirt, sweat or static electricity can cause problems for the chip recognition function on the printer.

A video of this process can be seen at

<http://www.medea.co.uk/techsupport/index.php?action=kb&article=81>



fig.1



fig.2



fig.3



fig.4



fig.5