

Contents

These instructions cover three types of cartridges(**fig.1**) Each cartridge box contains two parts.

1. Ink cartridge.
2. Yellow pin.

The yellow pin is used to pierce the air inlet holes on the cartridge.

Installation

1. Open the package (**fig.2**). Do not touch the chip on the cartridge.
2. As you can see in the photo, a pin is placed under a fin-like handle on the lid (**fig.3**).
3. Remove pin from holder and use it to pierce the hole(s) (**fig.4**).
5. Insert the ink cartridge into the printer, the fin-like handle will make the process more convenient. (**fig.5**).
6. Close the carriage lid and press the ink button to charge the printer.

The printer will take a few seconds to charge the printer, but once it is complete the printer will be ready to work

Attention

- a). Make sure that all the air holes have been pierced by the tool. If during printing no ink appears then redo the steps 3 & 4.
- b). If on printing one of the colours does not appear then redo step 3. Once all the air holes have been pierced do not shake, squeeze or turn the cartridge upside down.
- c). Install the cartridge as soon as possible after the air holes have been pierced. Do not touch the chip on the cartridge. If the cartridge is not recognised on installation then remove and clear the printer of any dust, compressed air is recommended for this, and re-install the cartridge.
- d). In order to get the best results from you printer, run a nozzle check after you have installed a new cartridge. If the results are unsatisfactory then use the printers built in head cleaning function to improve the situation.

A video of this process can be seen at

<http://www.medea.co.uk/techsupport/index.php?action=kb&article=82>



fig.1



fig.2



fig.3



fig.4

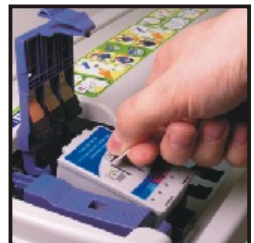


fig.5