



BLACK HP 336, 337 & 338 CARTRIDGE

Deskjet: 3745c, 5740, 5743, 6540, 6840, 6840dt, 9800 **Photosmart:** 6213, 8150, 8153, 8450gp, 8750
Photosmart All-In-One: 2610, 2710 **PSC:** 1610, 2350, 2353, 2355 **All-In-One:** 7310, 7410, 6210, 6620.

1. Peel back label to locate filler hole (**See Diagram**)
2. Assemble syringe and steel filling tube and fill with black ink
3. Insert steel filling tube into the appropriate filling hole and push into the centre of the sponge. Making sure the filling tube is straight and not at an angle.
4. **SLOWLY** inject ink until slight leakage appears from the filling hole.
5. After refilling place label back over filling hole.
6. Leave the cartridge to stand overnight on protective non-absorbent surface this will ensure no leakage and give the ink time to fully saturate the sponge.
7. Install cartridge and run a cleaning cycle.

**IMPORTANT: For best results, refill whilst ink still remains in the cartridge.
Empty cartridges left for more than a week do not always give a
successful re-fill.**